



FIXING INSTRUCTIONS UB39 VEPAC TERMINAL

Commence installation as for UB11 Vepac Slate Vent. Using silicone to seal the joint, push adaptor with pipe extension onto the vent unit.

PLEASE NOTE: Internal grille must be removed when UB11 vent is converted to UB39 terminal.

**Ubbink (UK) Ltd, Unit 33 Liliput Road, Brackmills Ind Est, Northampton, NN4 7DT
Tel: 01604 433000 Fax: 01604 433001 Email: info@ubbink.co.uk**



FIXING INSTRUCTIONS UB39 VEPAC TERMINAL

Commence installation as for UB11 Vepac Slate Vent. Using silicone to seal the joint, push adaptor with pipe extension onto the vent unit.

PLEASE NOTE: Internal grille must be removed when UB11 vent is converted to UB39 terminal.

**Ubbink (UK) Ltd, Unit 33 Liliput Road, Brackmills Ind Est, Northampton, NN4 7DT
Tel: 01604 433000 Fax: 01604 433001 Email: info@ubbink.co.uk**



FIXING INSTRUCTIONS UB39 VEPAC TERMINAL

Commence installation as for UB11 Vepac Slate Vent. Using silicone to seal the joint, push adaptor with pipe extension onto the vent unit.

PLEASE NOTE: Internal grille must be removed when UB11 vent is converted to UB39 terminal.

**Ubbink (UK) Ltd, Unit 33 Liliput Road, Brackmills Ind Est, Northampton, NN4 7DT
Tel: 01604 433000 Fax: 01604 433001 Email: info@ubbink.co.uk**