
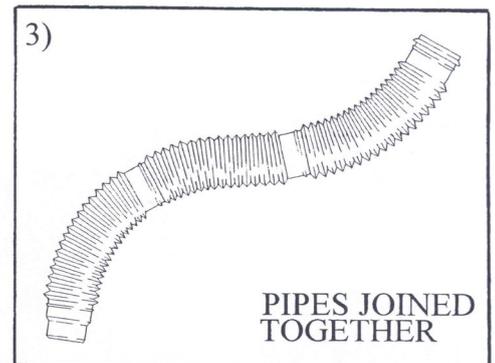
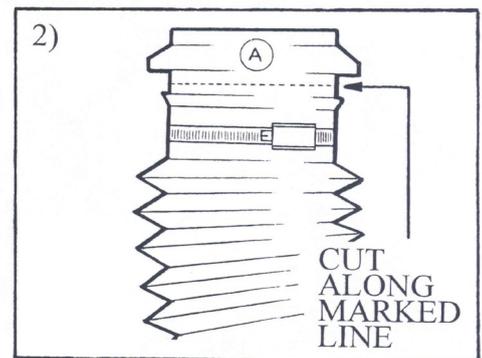
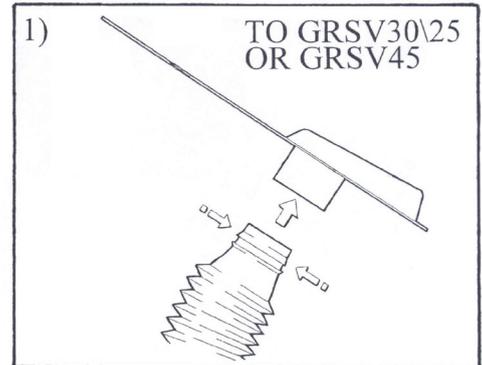
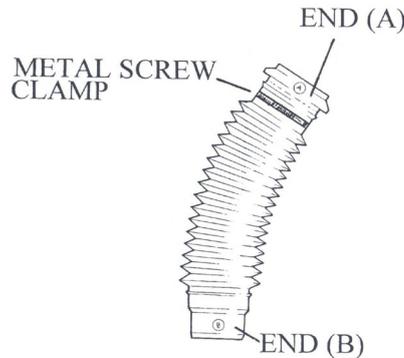


## Flexible Pipe

CODE **GRPA**

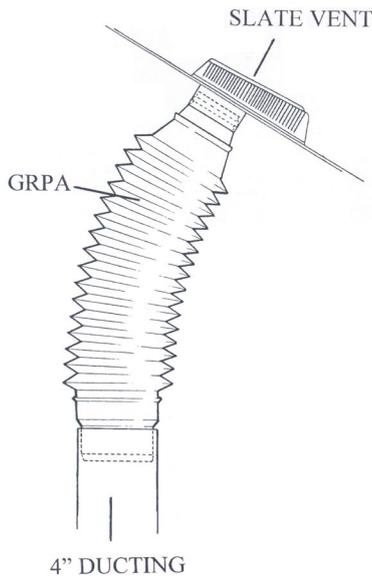

### Fitting Instructions:

#### 1) To Manthorpe vents.

Remove the metal screw clamp.  
Press in end (A) to form an oval opening and clip into the slate vent.  
Push end (B) into the soil pipe or ducting.

#### 2) If used with non-Manthorpe vents.

Use metal screw clamp to hold end (A) on vent spigot.  
It may be necessary to trim end (A) along marked line.  
Push end (B) into the soil pipe or ducting.

#### 3) Joining flexible pipes together.

Trim off end (A) along marked line and push firmly over end (B) of the next pipe to lock together.

**NOTE:** - The GRPA Flexible pipe and other ducting should be fully insulated along its total length in the roof space to avoid the risk of internal condensation. To form airtight seals it may be necessary to apply mastic sealant or tape to joints.

### References:

BSI : BS5534  
BSI : BS5572  
DOE : Building Regulations F1, H1

MANTHORPE BUILDING PRODUCTS LTD  
MANTHORPE HOUSE  
BRITAIN DRIVE  
CODNOR GATE BUSINESS PARK  
RIPLEY  
DERBYSHIRE DE5 3ND

TEL: 01773 303 000  
FAX: 01773 303 300  
EMAIL: [mbp.care@manthorpebp.co.uk](mailto:mbp.care@manthorpebp.co.uk)  
WEB: [www.manthorpebp.co.uk](http://www.manthorpebp.co.uk)

DRN M.A

Date 09.08.19

DRG No

Issue

The company maintains a policy of continuous development of its product range and reserves the right to amend the specification without notice.

**MBP 8076**

**B**