

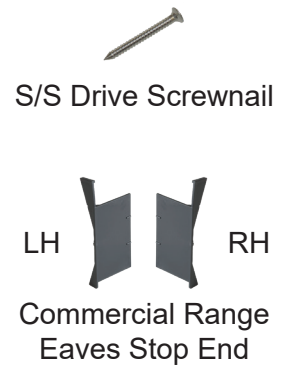


**Commercial Range Dry Verge System**

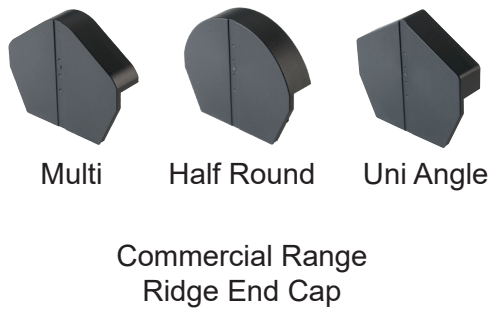


**Components**

*All components available separately*

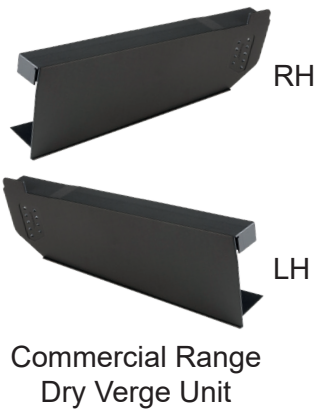

**Step 1**

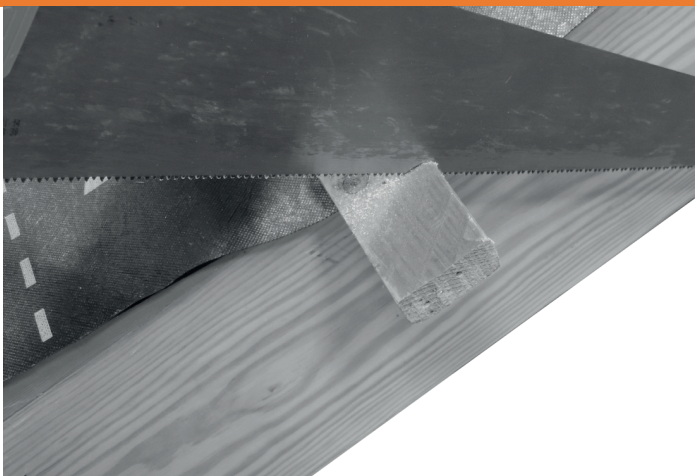

Cut the tiling battens to overhang the verge by 45mm. The underlay should not extend more than 10mm past the verge.

*Images show the installation of right hand units.*

**Step 2**

Position the eaves course tile and locate the **Dry Verge Unit** over the tile. Insert the **Eaves Stop End** and mark the position.



## Commercial Range Dry Verge System



### Step 3



Remove the tile and **Dry Verge Unit** and secure the **Eaves Stop End** with a **Drive Screwnail**.

### Step 4

Place the **Dry Verge Unit** on the tile and slide it down onto the **Eaves Stop End** ensuring that the fin has engaged.



### Step 5



With the back of the **Dry Verge Unit** pressed firmly down, nail through the appropriate hole with a **Drive Screwnail**.

Repeat Steps 1-5 for the opposite verge (if present).

## Commercial Range Dry Verge System




### Step 6

Lay the next tile at the verge and fix as per the Fixing Specification. To secure subsequent **Dry Verge Units**, first slide it onto the previous until the front lip drops over the tail and the verge tile and ensure that the fin is engaged and secure.

Press the back of the unit firmly down and nail through an appropriate hole.



### Step 7

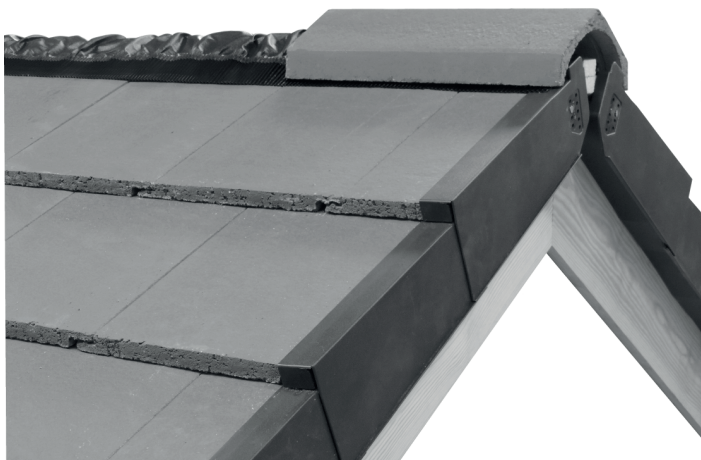


Repeat Step 6 for all subsequent courses before laying the ridge tiles.

### Step 8

Finish off the ridge with a **Ridge End Cap** to suit the ridge profile and tile type. Gauge the depth of the ridge tree batten and secure with a **Drive Screwnail** through the appropriate hole.

Alternatively a Russell Block End Ridge can be used and secured with the supplied fixings.

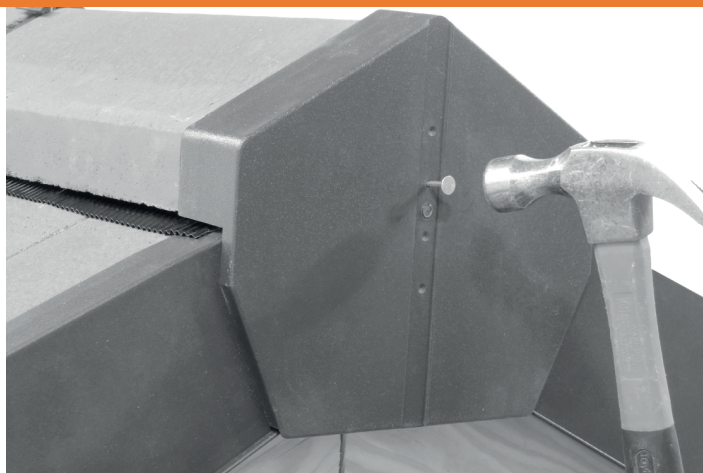



## Commercial Range Dry Verge System



### Notes

- Maximum Gauge: 343mm    Minimum Gauge: 293mm
- Maximum roof pitch: 45°
- For stone/brick verges excessive gapping may occur and a bird comb filler should be installed (supplied separately)
- For masonry verges an alternative fixing method is required - Please contact Russell Technical for installation advice
- When used on rigid sarking boards please contact Russell Technical for installation advice
- Where wraparound guttering is used please contact Russell Technical for installation advice
- For fixings into non-timber materials please contact Russell Technical for installation advice
- Battens used are to comply with BS5534: 2014
- When using Russell Dry Verge, the system counts as ONE of the TWO required perimeter fixings