


# UNIVERSAL DRY FIX VENTILATED RIDGE KITS

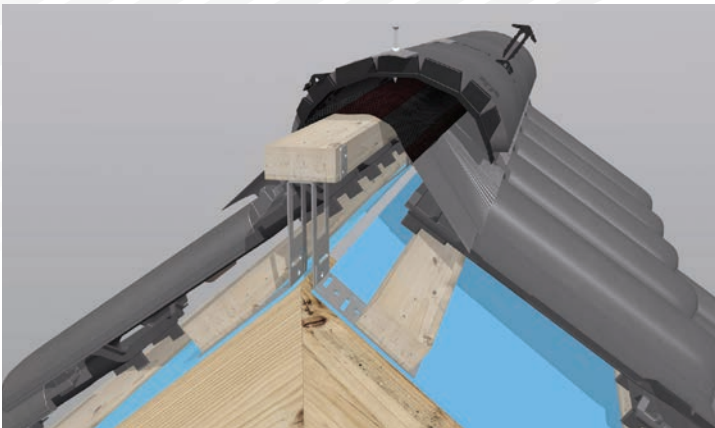

Helping you comply with BS 5534:2014.

Suitable for most ridge and hip applications; additional components may be required for hips.

- Conforms with BS 5250
- Products suitable for both high and low profile tiles
- Design resistances available upon request

#### Product Kits (Sold separately)

Type	Size	Product Codes
TIL-R Universal Dry Fix Ventilated Ridge Roll Kit	6m	<b>10650698</b>
TIL-R Universal Dry Fix Ventilated Ridge Roll Kit Extension Pack	n/a	<b>10652620</b>

#### Kit Contents

##### TIL-R Universal Dry Fix Ventilated Ridge Roll Kit.

###### Contains;

- 6m Ridge Roll
- 10 Ridge Batten Brackets
- 13 Ridge Unions (polyethylene) with 39 Union Clips (polyamide)
- 13 100mm Stainless Steel Screws
- 13 Stainless Steel Clamping Plates
- 13 A2 Stainless Steel & EPDM Sealing Washers

##### TIL-R Universal Dry Fix Ventilated Ridge Roll Kit Extension Packs for Clay Ridges etc.

###### Contains;

- 7 Ridge Batten Brackets
- 7 Ridge Unions (polyethylene) with 21 Union Clips (polyamide)
- 7 100mm Stainless Steel Screws
- 7 Stainless Steel Clamping Plates
- 7 A2 Stainless Steel & EPDM Sealing Washers

## Products



Steel  
Screw



Clamping  
Plate



Batten  
Bracket



Ridge  
Union



Ridge  
Union Clip




Sealing  
Washer




Ridge  
Roll

## Installation Procedure

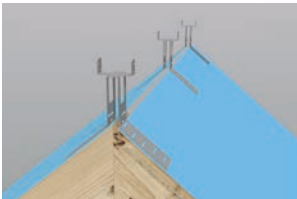


1. Install roof underlay and battens in the normal manner leaving a 30mm air-gap each side of apex to allow ventilation. Ridge Batten Brackets should be shaped prior to installation dependant on tile profile and roof pitch and then mounted at roof apex.

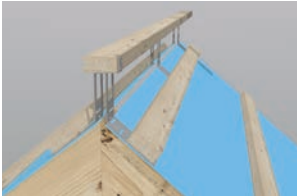


2. Fix timber Ridge Batten by nailing through Ridge Batten Brackets. A 10mm air-gap should remain between the batten and roof apex.



3. Lay and fix top course of tiles or slates and place Ridge Roll along apex centre line. Tack Roll to Ridge Battens by corrosion resistant staples or nails every 1m. Peel off protective tape from mastic strips and press edges of Ridge Roll firmly onto tiles or slates. To comply with BS 5534:2014 ridge tile must overlap the top tile by 65mm.

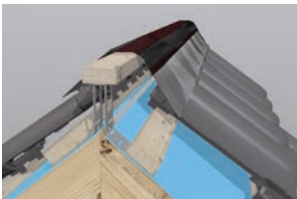

4. Ridge Roll should overlap edge of gable by 50mm. If Ridge Rolls are joined a 75mm overlap should apply. Do not apply at temperatures below 5°C.

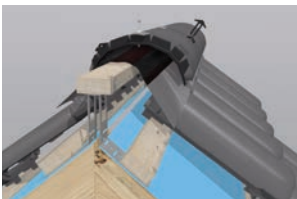

5. Join Ridge Tiles using flexible Ridge Unions with Clips.



6. Secure into Ridge Batten through Clamping Plate and centre hole of Ridge Unions using 100mm stainless steel screws and washers provided.

**Do not use nails.**

Date of issue: Mar 19