




Ubbink (UK) Ltd.,  
Borough Road, Brackley, Northants, NN13 7TB  
Telephone: 0845 456 3499 Fax: (01280) 705332  
email: info@ubbink.co.uk web: www.ubbink.co.uk

### Fixing Instructions UB8 Plain Tile Vent

- 1) Complete tiling to the course below where the UB8 is to be located. For existing roof remove area of tiling around where the vent is to be located.
- 2) Cut sarking felt/boarding in the shape of a 'V' (see figure 1) immediately beneath the second batten above the last completed course.  
Fold felt flap over the batten at the top of the hole, pull tight & tack in position.
- 3) Place vent in position, placing centre of vent over the centre point of a full tile. Fix to second batten above last completed course.
- 4) Recommence tiling:  
In the next course, the tiles will dress over the unit by  $\frac{1}{2}$  a tile on either side.  
The following course will be a complete course dressing over the back section of the unit's hood.

Figure 1

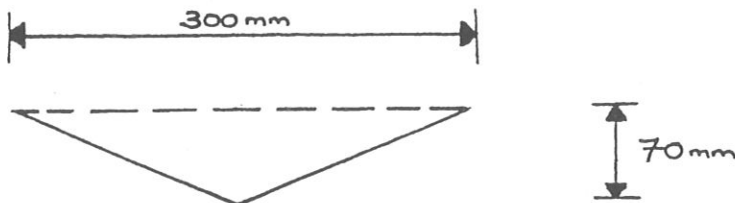

#### PLEASE NOTE:

Do not site the vent over a rafter.  
The exact positioning of the number of vents required should be adjusted to suit the rafter centres if necessary.

The Vent should only be used when the tiles have been laid in accordance with the manufacturer's instructions.  
i.e. fascia board is set 50mm above the rafter backs/tiling surface.